
 
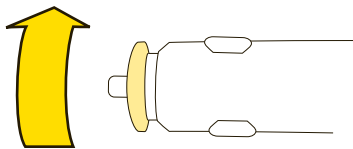


To change the fuse:

1 Unscrew the end cap of the Cigarette Lighter Adaptor:



The end cap and metal contact pin come loose:

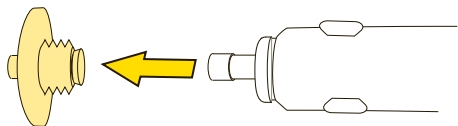


Note: The end cap and contact pin are loose and may become separated.

A metal ferrule on the main body of the Adaptor may also come loose.




Ensure that these parts are reassembled and in position before reassembling the Adaptor.

2 Remove the old fuse:

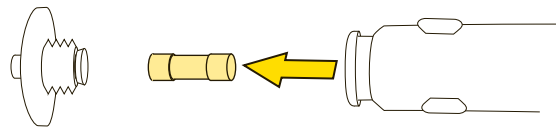


3 Insert the new fuse:

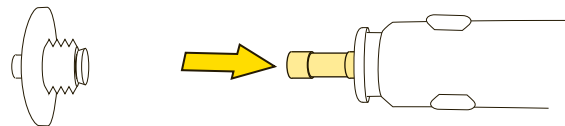

Replace the fuse with a 4.6 mm x 16 mm, 2A, 250V slow-blow fuse.

4 Screw the end cap and contact pin back on:

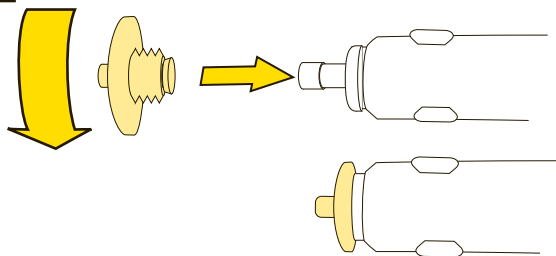


8100128
Rev. B

WORKABOUT PRO

Cigarette Lighter Adaptor
Model WA3113-G2

Instruction Sheet

April 3, 2007 PN: 8100128.B

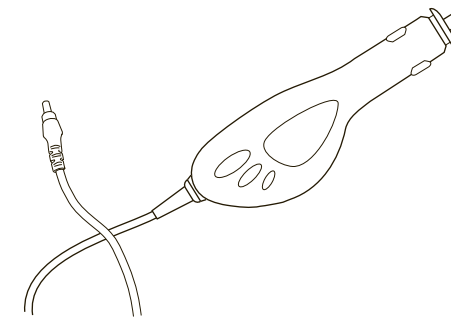


SAVE THESE INSTRUCTIONS! They contain important safety information for the WORKABOUT PRO Cigarette Lighter Adaptor.


ISO 9001 Certified
Quality Management System

PSION TEKLOGIX

Contents of the box:

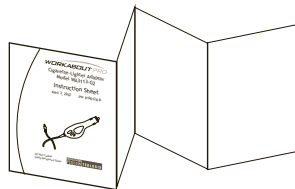


This Instruction Sheet

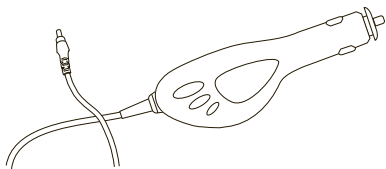


The Cigarette Lighter Adaptor

Connecting the Cigarette Lighter Adaptor

1 Insert the adaptor into the cigarette lighter outlet of your vehicle:

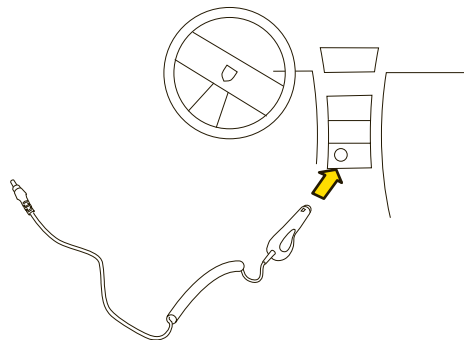


2 Insert the DC power plug of the Cigarette Lighter Adaptor into the DC IN socket in the base of the WORKABOUT PRO:

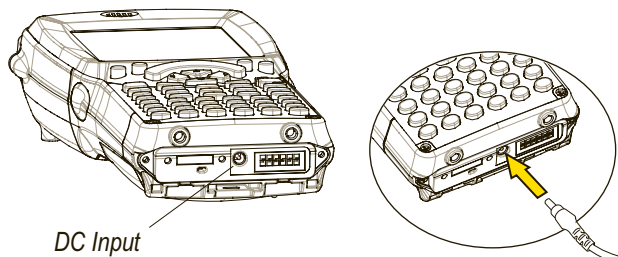

Disconnecting the Cigarette Lighter Adaptor

1 Remove the DC power plug of the Cigarette Lighter Adaptor from the base of the WORKABOUT PRO:

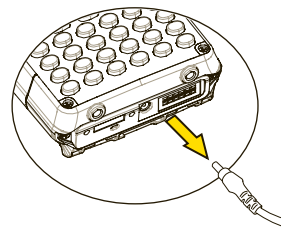

2 Remove the Cigarette Lighter Adaptor from the cigarette lighter outlet of your vehicle.

Important:
Unplug the Cigarette Lighter Adaptor from your vehicle before starting the vehicle.

SAFETY INSTRUCTIONS:

- This adaptor is designed for use with the WORKABOUT PRO.
- Use of an attachment or extension cord not recommended or sold by PSION TEKLOGIX may result in fire, electric shock, or personal injury.
- Do not operate the Cigarette Lighter Adaptor with a damaged cord or plug. Replace it immediately.
- Do not operate the Cigarette Lighter Adaptor if it has received a sharp blow or has been otherwise damaged.
- Ensure that the cable is positioned so that it is not subjected to damage or stress.
- To reduce the risk of electric shock, unplug the Cigarette Lighter Adaptor from the outlet before attempting any maintenance or cleaning.
- If the Cigarette Lighter Adaptor does not function, unscrew the connector end and check whether the fuse has blown. See over for instructions.

For any other cause of failure, return the Cigarette Lighter Adaptor to a PSION TEKLOGIX service depot.

Over