

**HUSKY**  TM

Please read these instructions  
before using your FS/2


**HUSKY FS/2  
USER LEAFLET**

## USING YOUR FS/2

The **FS/2** hand-held computer is rugged and waterproof, but to help ensure trouble-free operation, we recommend that you:

- Check how to use your application before beginning work.
- Carry a spare set of batteries
- Avoid subjecting your **FS/2** to:
  - unnecessary temperature extremes - bright sunlight in a vehicle, for example
  - prolonged immersion in water
  - physical mistreatment

The **FS/2** leaves the factory fitted with non-rechargeable Alkaline batteries and is ready for use. **Note:** If you fit **new** rechargeable batteries instead, you must charge the **FS/2** before use; please refer to BATTERIES.

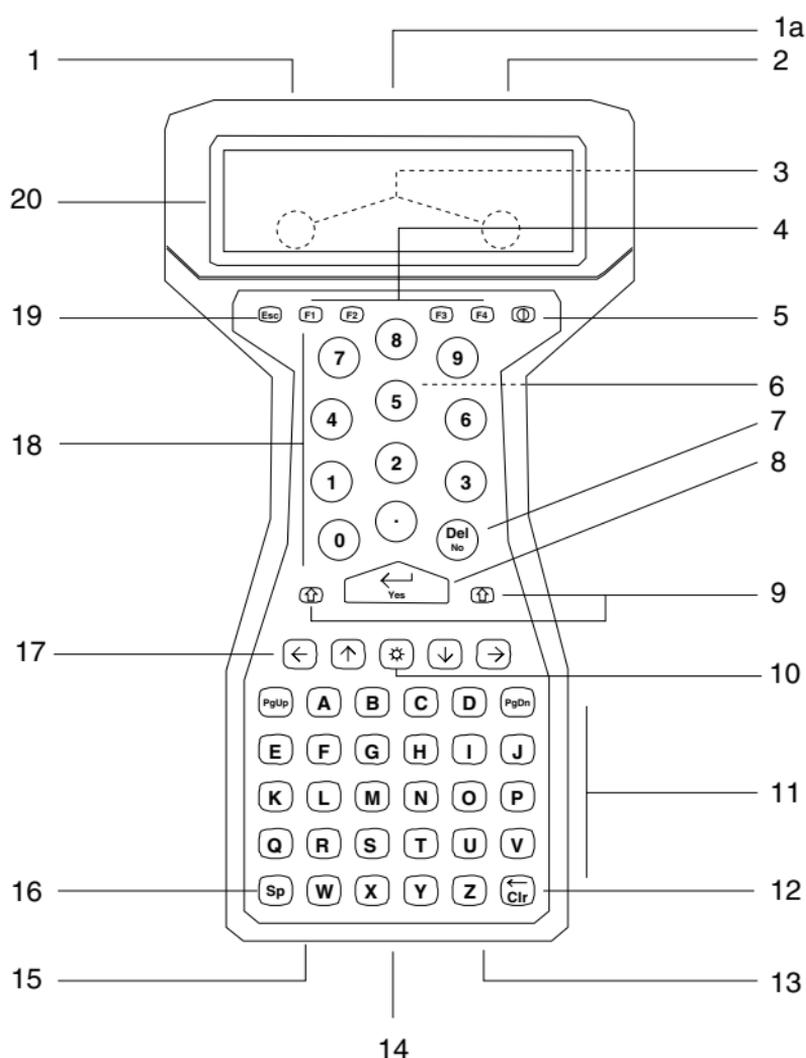

**Note:** Keyboard and connector layouts vary on certain models.

- 1 PORT 1 CONNECTOR: main serial port.
- 2 PORT 2 CONNECTOR: second serial port.
- 1a Alternatively, on some models a single connector is provided, combining PORT 1 and PORT 2.
- 3 CONTACTS: *on the rear of the unit*, these connect to the **FS/2 Communications and Charging Rack**, if this *option* is fitted.
- 4 FUNCTION KEYS: press to use application functions.
- 5 POWER KEY: press to turn on or off.
- 6 HANDSTRAP: *on the rear of the unit*, this helps you hold the **FS/2** securely.
- 7 DEL/NO KEY: press to delete entries or answer No to a question.
- 8 ENTER/YES KEY: press to complete typing, type a carriage return, or answer Yes to a question.
- 9 SHIFT KEYS (⇧): hold either down to type the characters (or functions) shown above the keys.
- 10 BACKLIGHT KEY: press to illuminate the screen for use in low light. You may need to press ⏏ at the same time (depending how your **FS/2** is set up).
- 11 TYPING KEYS: type letters, or symbols and functions when used with ⇧ (SHIFT).
- 12 BACKSPACE KEY: press to erase typing.
- 13 PORT 4 CONNECTOR: *option*. Only fitted if required to use other options.
- 14 BATTERY CAP: remove to change batteries.
- 15 PORT 3 CONNECTOR: for connecting the **FS/2 AC Adaptor**.
- 16 SPACE KEY: types a space (blank) character.
- 17 CURSOR KEYS: move the cursor.  
SHIFT ⬆ and SHIFT ⬇ adjust screen contrast.
- 18 NUMERIC KEYPAD: type numbers.
- 19 ESCAPE KEY: usually used to cancel a function.
- 20 LCD SCREEN: displays prompts and messages and information as you type.

# CONTROLS

**Note:** Your application's user instructions may supplement the following information.

## Turning on and off

---

Press **Ⓚ** to turn on, or off. To conserve power, the **FS/2** turns off automatically if you have not pressed any keys for a short while.

## Screen contrast

---

Adjust the screen contrast for optimum readability, especially at temperature extremes. Hold down either **⇧** (SHIFT) key and press **↑** (UP ARROW) to increase contrast or **↓** (DOWN ARROW) to decrease contrast.

## Screen backlight

---

In low ambient light, press **☼** to turn the backlight on. To turn it off, press **☼** again. You may need to press **Ⓚ** *at the same time* (depending how your **FS/2** is set up). The backlight turns off automatically after a short time, to conserve power.

## Date entry

---

To type numbers or letters, press the appropriate keys. To type a space, press the **ⓈⓅ** (SPACE) key.

To delete characters you've just typed, press the **ⓀⓇ** (BACKSPACE) key.

To select the characters or functions shown above the keys, hold down either **⇧** (SHIFT) key and then press the appropriate key.

## Moving the cursor

---

Software applications will normally allow you to move the cursor a character or line at a time, using the arrow keys: **←**, **→**, **↑** and **↓**. To move the cursor up or down several lines, use **Ⓟ** and **Ⓡ**.

# BATTERIES

The **FS/2** can be fitted with either **rechargeable** or **replaceable** batteries.

The **FS/2** batteries are designed to last more than a working shift.

However, if power does run low, a warning **BATTERY LEVEL LOW** will be displayed. (After a further period of use, your **FS/2** will turn itself off and will not turn on again.) You should do one of the following:

Return the **FS/2** to your base or office.

*Or* if rechargeable batteries are fitted, recharge them (see **Charging batteries**) or fit a fully charged battery stick (see **Replacing batteries**).

*Or* fit three new AA size Alkaline batteries (see **Replacing batteries**).

## Charging batteries

---

Charging is recommended before each working shift. You will need an **FS/2 AC Adaptor**.

**CAUTION: DO NOT ATTEMPT TO RECHARGE NON-RECHARGEABLE BATTERIES. Check that rechargeable batteries are fitted to your FS/2, and are oriented correctly. Use only the FS/2 AC Adaptor.**

- Turn the unit off.
- Plug the AC adaptor into the AC supply.
- Connect the AC adaptor to Port 3.
- Turn on the AC supply.
- Leave the unit to recharge, preferably for 8 hours.
- Turn off or disconnect from the AC supply.

Alternatively, if your system includes the **FS/2 Charging and Communications Rack**, you can recharge a unit by placing it on the Rack.

# Replacing batteries

---

- Turn your **FS/2** off.
- Remove the battery cap by using a suitable coin.
- Do not allow rain or moisture into the battery compartment.
- Tilt the unit to slide out the batteries.
- Slide the fresh batteries into the battery compartment, positive end first. If you are fitting AA size batteries, it is advisable to fit the packing sleeve supplied with the **FS/2**.
- Refit the battery cap. Seat it with finger pressure first and make sure that it has engaged the screw threads before tightening it with a suitable coin.
- Turn on and check operation.
- If you can't turn on, contact your system provider.
- After changing batteries, you **MUST** ensure that the battery type, capacity and power management are correctly set. (Refer to your application's user instructions.)

**CAUTION: If you have changed from rechargeable to non-rechargeable batteries, warn anyone you give the unit to. Non-rechargeable batteries must NOT be recharged. Always use batteries of the same type and charge state - don't mix fresh batteries with used batteries, or rechargeable batteries with non-rechargeable ones. Observe the instructions printed on the battery. Replace only with batteries approved by your FS/2 supplier. DO NOT FIT LITHIUM BATTERIES.**

**ATTENTION: Dispose of or recycle used batteries according to the manufacturer's instructions. Nickel-Cadmium rechargeable batteries must be recycled, or disposed of properly.**

**CAUTION: BATTERY CHEMICAL LEAKAGE IS CORROSIVE. In the unlikely event of battery leakage, do not touch. In case of accidental contact, flush immediately with running water.**

## CLEANING

If the screen gets dirty or smeared, clean it with a clean cloth. If the **FS/2** gets very dirty, it should be cleaned:

- Make sure that the battery cap is tight. If you have dropped it, check that the case and seals are intact.
- Gently rinse the unit under clean running water (no more than hand hot, 40°C). Do not immerse the unit unnecessarily, or use a high pressure jet.
- To remove stubborn deposits, use a soft bristle brush and a mild detergent. **TREAT THE KEYBOARD GENTLY.**
- Blow any water out of the connectors, then leave it to drain and air dry. **DO NOT EXPOSE THE UNIT TO TEMPERATURES ABOVE 55°C.**
- Polish the screen with a clean cloth.

**CAUTION: Do not use organic solvents or harsh detergents, as they may damage the casing.**

## PERIPHERALS

**CAUTION: Connect only approved cables and peripherals to your FS/2.**

To connect a suitable peripheral to the **FS/2**:

- Turn off the **FS/2** (and peripheral, if appropriate).
- If fitted, remove the protective cap from the appropriate connector.
- Fit the peripheral to the connector.
- Use connector locking mechanisms where fitted.
- Turn on the **FS/2** (and peripheral, if appropriate).

To disconnect a peripheral:

- Turn off the **FS/2** (and peripheral, if appropriate).
- Disconnect the peripheral from the connector.
- If provided with a protective cap, fit it to the connector.

# PROBLEMS

If you have problems with the **FS/2**, TELL YOUR SYSTEM PROVIDER, but here are a few quick checks:

- If the unit will not turn on, check the batteries' orientation and try a fresh set of batteries.
- If you cannot read the display, try adjusting the screen contrast: hold down either  (SHIFT) key and press  or .
- If you drop the unit and it stops working, try turning off and on, and check the batteries.
- Your application may provide a RESET facility.
- If the unit is very dirty or wet, clean it as described in CLEANING.

**CAUTION: There are no user serviceable parts inside the FS/2. Do not attempt to open.**

## Electromagnetic Compatibility

---

The **FS/2** complies with EN55022 Class B.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If the **FS/2** does cause harmful interference, turn it off and consult your dealer or technician for help.

The **FS/2** must only be used with approved peripherals and approved A.C. adaptors; shielded communications cables must be employed.

Changes or modifications could void the user's authority to operate the equipment.

